

# bea-fon















## User Manual

Bea-fon S10

 
English



## Product safety information

	Please read these simple guidelines. Not following them may be dangerous or illegal
	Switch off the phone in the vicinity of chemical plants, gas stations and other locations containing explosive objects.
	Keep the phone far away from children.
	When driving, please use the hands free calling device (purchased separately) to ensure safety. Please park the car at roadside for communication unless in emergency.
	Switch off the phone when boarding an airplane and do not switch the phone on during the flight.
	Be careful when using the mobile phone in the vicinity of such devices as pacemakers, hearing aids and other electro-medical equipment, which may be interfered by the mobile phone.
	No guarantee for the accessories and parts not produced by the original factory.
	Never attempt to disassemble the phone by yourself. Contact the supplier in case of any trouble with your mobile phone.
	Do not recharge the phone without battery being installed.
	Charge the phone in well-ventilated environment and keep away from inflammable and high explosive articles.
	To avoid demagnetization, keep the handset away from magnetic substances, such as magnetic discs or credit cards.
	Keep the phone away from liquid. If soaking or erosion occurs, take the battery out and contact the supplier.
	Avoid using the phone in too high or too low temperature environments. Never leave the phone exposed under direct sunlight, in high humidity or in a dusty environment.
	Do not use liquid or a damp cloth with strong detergents to clean the handset.

# Your phone

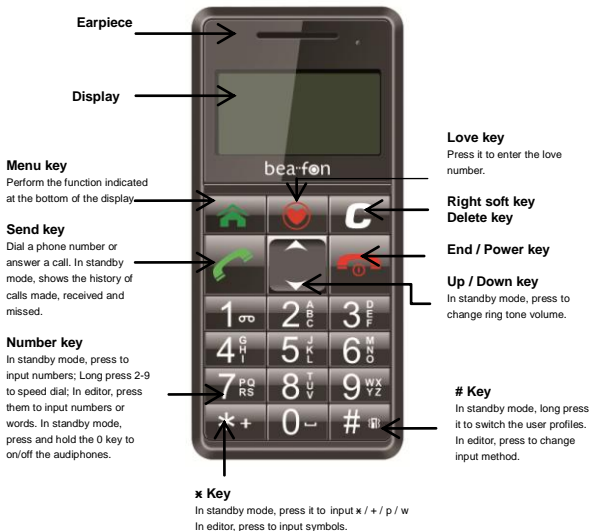

## Screen Icons

---



Signal Indicator, More bars indicates stronger signal.



Alarm clock



Battery Level Indicator



Keypad lock



Handset mode



Missed call(s)

### Ring mode



Ring



Vibration Only



Vibration then Ring



Vibration and Ring

## Battery

 
 
---

The lithium battery of the mobile phone can be immediately used after unpacking. A new battery performs best after performing a full charge/discharge 3 times.

### Installing the battery

1. Insert the battery by aligning the gold contacts in the battery compartment on the phone.
2. Push down on the upper section of the battery until it

clicks into place.

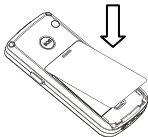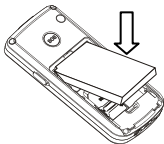

Pull down the battery

press the cover

### **Removing the battery**

1. Ensure that your mobile phone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.

## **How to insert the SIM card**

 
---

If you want a mobile Phone that is sophisticated and easy to use and here it's in your hands! Naturally you are eager to star using it, but first you need to insert the SIM card.

### **Insert the SIM card as follows:**

- Ensure that the phone is switched off and charger is disconnected from the phone.
- Turn the phone over and remove the back cover.
- If the battery is already inside, remove it!
- Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder face down.
- Replace the battery first.

- Replace the back cover.

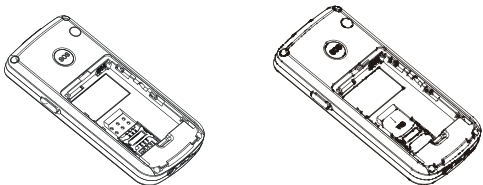

### **What is a SIM card?**

Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

### **How to charge the battery**

 
---

Your phone is powered by a rechargeable battery.

- Connect your travel adapter to the bottom of your mobile phone or the back of the charger that it has laid the mobile phone.
- Connect the other end of the travel adapter to the mains socket.
- If you are charging the battery when the mobile phone is switched off, the display will show a large battery icon with the bars moving from up and down. If charging the battery when the mobile is switched on, the display will show a

smaller icon.

- When the battery is fully charge, disconnect the charger.

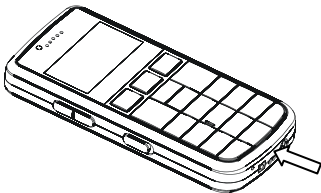

**Note:** Please ensure the battery be charged for 12 hours or more before its first use.

## Power on/off

---

Ensure that you SIM card is in your mobile phone and that the battery is charged.

Please hold END key to Power on/off the phone. The phone will automatically search for the network.

## Display information

---

Besides sending and receiving calls, you can also do:

- In the standby mode, press Menu key to enter main Menu.
- In the standby mode, press Right soft key to view phone book list.
- In the standby mode, press Send key to enter call list.

## Menu tree

---

### 1. Phone book

### 2. Messages

- Write message
- Inbox
- Outbox
- Delete all SMS
- Use Template
- Voice Mail Server
- Broadcast Message
- Message Settings
- Services

### 3. Call history

- Missed Calls
- Dialed Calls
- Received Calls
- Delete Call Log
- Call Time

### 4. Alarm

### 5. User profiles

- General
- Meeting

- Outdoor

- Indoor

- Headset

### 6. Settings

- Time and date
- One key help
- Phone settings
- Call setup
- Network Setup
- Security setup
- Restore Factory Settings

## Write text

---

Change input mode: press # key to change the input mode (input modes: ABC, abc, 123)

In the abc / ABC input, press the number keys 2-9 to input letters. Please input the characters followed the order according to the letters on the keys. Press the key once to input the first letter, press it twice to input the second one and so on.

In the 123 input, Press the keys to input the corresponding numbers.

Input Symbol: Press the “\*” key to select the symbol that you want.

Input Space: Press 0 key to input space, it does not word in 123



mode.

**Delete Character:** Press Right soft key to clear a character. Press and hold Right soft key to delete all characters and clear the display.

**Move cursor to left or right:** Press the Up/down navigation keys to move the cursor left or right.

## **How to add contact to your phone books**

There are someone who you want to call again and again so it makes sense to add these to your phone book. You can then access these numbers quickly and easily.

Select Menu then phone book.

Press Menu key to view the phone book list, and then select one to press the Menu key to select Add new entry.

Select whether to save the new contact to your SIM card or to the phone's memory.

Enter the contact's phone number.

Press Menu key, then enter a name and confirm by Menu key.

If SIM card is selected to save new contact, you can enter name and number.

If phone is selected to save the new contact. Name, Number, Home Number, Company Name, Email Address, Office Number, Fax Number, birthday, Associate sound to add the content.

To delete someone from your phone book list, first select the

name, then press Menu key and choose Delete.

## **How to make and receive calls**

---

To most basic way to make a call is to key in the number in the standby mode and press the send key. One advantage of a mobile phone is that you can also store people's names and numbers in your mobile phone book and call then more easily.

To call someone:

- Select menu then phone book. From here use the Up/down keys to find the name of the person you want to call. You can also type in the first letter of the name of the person you want to call.
- Now simply press Send key.
- To receive call: press Send key.
- To end the call: press End key.

Make sure you are in an area with sufficient coverage to make calls. The strength of the network signal is indicated on top left corner of screen.

## **How to send and receive text messages**

---

You can use your mobile phone to send and receive text message.

1. Go to Menu→Messages→Write message.
2. Write your message. For more information on writing, see section 'write text'.
3. Press MENU key and select done to send the message.

Select send to send the message to one person.

To send to more than one person, select Send to many and select the names from the phone book list.

Select send and save to send the message and save it to Outbox.

4. Enter the recipient's phone number or select from phone book if you have previously stored the person's number in it. Then select MENU key to send the message.

Upon receiving a message, the mobile phone indicates with ring tone, prompt, or a new message icon.

1. Press Menu key select to open the new message. You can also go to inbox to read the message.
2. Use Up/Down keys to read the message.
3. While the message is open, use Menu key to reply, Delete, Edit, Forward, Copy to Phone, Move to Phone, Call all, Move all, Use number.

## Shortcut Key

---

### **Electric Torch Shortcut Key**

Press the Electric Torch Shortcut Key to switch on/off the electric torch.

### **Love Number Shortcut Key**

Press the Love Number Shortcut Key to show the love number and then press the Menu Key to option:

Edit: You can edit the love number.

- 1) Press the Menu Key or Talk Key to enter the edition contact

surface.

2) Press the Menu Key or Talk Key enters the edition name or the edition number, after this you press the Menu key or Talk Key.

3) Inputs the name and the number press the Menu Key or Talk Key prompts whether “the storage”, presses the Menu Key or Talk Key preservation, presses the C key not to preserve the establishment.

Erase: You can erase the love number.

Saved has the dear ones number record, the choice “Erase”, Presses the Menu Key or Talk Key prompts whether “Erase”, Continues to press the Menu Key or Talk Key deletes this record, presses the C key not to delete this record.

Love Number SMS: You can send SMS to the love number.

Presses the Menu Key or Talk Key enters writes the short note contact surface, edits the short note content, presses the Menu Key or the Talk key send the SMS gives the current love number.

### **SOS Shortcut Key**

Press the SOS Shortcut Key to dial the SOS number. If the number is empty, you can set:

### **Settings**

You can set On or Off. Select One Key help Setting this item, presses the Menu Key or Talk Key once turn on the One Key Help Settings, then presses once the Menu Key or the Talk key again turn off One Key help Settings.

## **Call Wait**

You can select 1 Second/3 Seconds/ 5 Seconds/10 Seconds. For example: Chooses for 1 second to press the Menu Key or the Talk key save your selection;

## **SOS Number**

You can set 5 SOS numbers.

## **SOS Light**

You can set On or Off. Chooses One Key Help light this item to press the Menu Key or Talk key turn on indicating lamp, then presses once the Menu Key or the Talk key turn off indicating lamp;

## **SOS SMS:**

You can set On or Off. The choice One Key Help SMS one item to press the Menu Key or a Talk key turn on One Key Help **SMS** remind, then presses a time Menu Key or the Talk key turn off One Key Help SMS reminder again.

## **SOS Context:**

You can set one key help SMS's context. Presses the Menu Key or the Talk Key to enter the edition contact surface, after the input SMS content presses the Menu Key or the Talk Key then presses the C key to prompt whether "the storage", presses the Menu Key or the Talk Key preservation, presses the C key not to preserve the establishment.

You can also press the Menu Key to select [Settings->One Key Help] to set it.

## **Audiphone Shortcut Key**

Press and hold the Audiphone Shortcut "0" Key to switch on/off the audiphone.

The Audiphone can not be activated until you plug into headset.

## **Keypad lock shortcut key**

Press the keypad lock shortcut Key to switch on/off the keypad lock.)

## **Menu functions**

---

<b>Function</b>	<b>Description</b>	<b>Selection</b>
Add new phone book	Add the new contacts to phone book	Menu→Phone book →Option→Add new entry
Send message	Send text messages to mobile phones	Menu→Message→ Write message
Read message	Read text messages (receive, sent)	Menu→Messages →Inbox/Outbox
Templates	Preset messages to help to make sending text messages easier and quicker	Menu→Messages →Template
Voice mail	Receive and listen to voice message	Menu→Messages →Voicemail Service

Recent calls	View all recent calls	Menu→Call history →Missed calls/ Dialed calls/ Received calls or Select send key from the standby mode.
Alarm	Set alarm alert time	Menu→Alarm
User Profiles	Tone, Volume, Alert Type, Ring Type, Extra Tone, Answer Mode about different user profiles	Menu→User Profiles
Time and date	Set date and time	Menu→Settings→Time and date
One key help	Set one key help	Menu→Settings→one key help
Language	Set the phone language	Menu→Settings→phone setup→Language
Speed Dial	Set speed dial numbers that you can dial the number of setting by long pressing number key.	Menu→Settings→phone setup→Speed Dial
Caller ID	You may select Set By Network, Hide Id or Send Id.	Menu→Settings→Call setup→Caller ID

Call waiting	Hold the first call and answer the second call(need network support)	Menu→Settings→Call setup→Call waiting
Divert calls	Divert the incoming calls to other preset numbers (need network support)	Menu→Settings→call setup→call Divert
Call Barring	Prevent incoming or outgoing calls based on user-defined conditions.	Menu→Settings→call setup→Call Barring
Call time reminder	Allow user to remind him about duration of a call.	Menu→Settings→call setup→Call time reminder
Call Time Display	Display the call time When you dial number.	Menu→Settings→call setup→Call Time Display
Auto Redial	turn on or off Auto Redial	Menu→Settings→call setup→Auto Redial
Network setup	Set network searching mode	Menu→Settings→Network setup
Security setup	Access your phone's Security setup * Default phone code is 1122	Menu→Settings→Security setup
Restore Factory Settings	Restore to original factory settings	Menu→Settings→Restore Factory Settings



## Basic Specifications

---

Network: GSM 900/DCS1800

Dimension: 110mm\*50.2mm\*14.6mm

Battery: 900mAh

Waiting time: about 200~300hours\*

Talk time: about 3~5 hours\*

\*Variation in operation times may occur depending on SIM card, network, and usage settings, usage style and environments.

## Care and Maintenance

---

### Battery and Charger Safety

- Only use batteries approved by the phone manufacturer.
- Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles.
- The charging time depends on the charger and the battery used.
- The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.
- If unused, a fully charged battery will lose its charge.
- When the charger is not disconnecting it from the power source. Do not leave the battery connected to the charger and power source for longer than necessary as overcharging it will shorten its life.

- Leaving the battery in hot or cold place, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object causes a direct connection between the + and – terminals of the battery. Short-circuiting the terminals may damage the battery or the connecting object.
- Do not dispose of the battery in a fire.

## **Phone Maintenance**

Your device is a product of superior design and chairmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

Keep the phone and all the parts and accessories (for example, SIM card) out of the reach of small children.

Do not use or store the phone in dusty or dirty locations. Its moving parts and electronic components can be damaged.

Do not use or store the phone in excessively hot places. High temperatures will shorten the life-span of the phone, damage the battery, and warp or melt the plastic used in the phone's manufacture.

Do not store the phone in excessively cold places. When the phone returns to its normal temperature, moisture can form inside the phone, causing damage to the electronic circuits.

Do not mishandle or abuse the phone. Dropping, knocking or shaking it can damage the internal circuits.

Do not use harsh chemicals, strong detergents, or cleaning solvents to clean the phone. If you must clean it, then use a soft, clean and dry cloth.

Do not paint the phone. Paint can clog the moving parts and prevent proper operation.

Use only the supplied or an approved replacement antenna.

Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

If the phone or any of the accessories are not working as they should, please consult your dealer who can provide you with the expert assistance required.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

## FAQ

---

If your phone appears the questions frequently, please refer to the answers as follows. After that, you cannot solve the questions, please contact with the mobile phone dealers or service provider.

Trouble	Possible reasons
The phone cannot be switched on	<ol style="list-style-type: none"><li>1. Is there any power in the battery?</li><li>2. Is the battery installed properly?</li></ol>
Battery cannot be charged	<ol style="list-style-type: none"><li>1. Check if the charger is connected with the phone correctly.</li><li>2. Is the battery usable? The performance of the battery will be reduced after used for several years.</li><li>3. Is the battery completely discharged? The phone needs to be connected to the charger for a while before it can be charged.</li></ol>
Fails to register to the network	<ol style="list-style-type: none"><li>1. The signal is too weak, or there may be some radio interference around. Check the signal strength meter on the screen to see whether vertical lines are displayed.</li><li>2. Is the SIM card installed properly, poorly contacted or damaged? If the SIM card is damaged, please ask your network operator for replacement.</li></ol>
Cannot call out	<ol style="list-style-type: none"><li>1. Is the SIM card registered in the network?</li><li>2. Is call barring enabled?</li></ol>

	3. Calling prohibited due to call charges not paid? 4. Have you enabled the function of FDN? 5. Have you selected line 2 though your network operator doesn't provide this service?
Cannot call in	1. Is the SIM card registered in the network? 2. Incoming call prohibited due to call charges not paid? 3. Is call diverting enabled? 4. Is the "Bar incoming call" function in call barring enabled?
PIN locked	Input the PUK code supplied with the SIM card to unlock or contact the network operator.
Call charge meter invalid	No metering pulse is transmitted. Please contact your network operator.
SIM error	1. SIM card is dirty. Clean it. 2. Reinstall the SIM card. 3. SIM card is damaged. Replace it.

## Appendix II Abbreviations and explanations

**GSM**---Global System of Mobile Communication.

**SIM**---Subscriber Identity Module.

**PIN**---Personal Identity Number.

Usually refers to PIN1. Supplied with SIM card. Used to unlock the SIM card.

**PUK---Personal Unlock Code.**

Supplied with SIM card. It is used to unlock the SIM card if you input wrong PIN code three times consecutively and the SIM card is locked. You can also use it to modify PIN code.

**Caution**

Our company will not take any responsibility for result caused by not following the above suggestion or by improper use.

If the above content in this manual is not accordance with your mobile phone, please subject to your mobile phone.

Our company has the right to subject to amendment without notice.